
Prestige PP Vent Outlet Replacement Kit for Solo 60/110 and Excellence 110 Boilers



Kit Part Number:

PSRKIT02 – Solo 60, Solo 110 (PP)
PSRKIT73 - Excellence 110 (PP)

Parts List: PSRKIT02/PSRKIT73

1. PP Vent Outlet Pipe (1)
2. Stainless Steel Vent Outlet Adapter (1)
3. Heat Exchanger Flue Adapter Gasket (1)

Recommended tools:

- Phillips-head screwdriver
- Adjustable wrench
- Hacksaw
- Gloves
- Rag

WARNING

Indicates a potentially hazardous situation which, if ignored, can result in serious injury or substantial property damage.

NOTICE

Indicates special instructions on installation, operation or maintenance, which are important to equipment but not related to personal injury hazards.

WARNING

For your safety, turn off electrical power supply at service panel and allow unit to cool before proceeding to avoid possible electrical shock and scald hazard. Failure to do so can cause severe personal injury or death.

WARNING

Failure to follow instructions below can result in severe personal injury or damage if ignored:

- Instructions are for a qualified installer / service technician
- Read all instructions before proceeding
- Follow instructions in the proper order.

Prestige PP Vent Outlet Replacement Kit for Solo 60/110 and Excellence 110 Boilers

These instructions apply to retro-fit PP Vent Outlet Pipe to an existing MCBA controlled Prestige Solo 60/110 and Excellence boilers (PS based serial numbers).

General Instructions

1. Turn power to the unit "OFF"
2. Remove the front panel of the Prestige by removing the thumb screw along the upper edge of the unit. Lift the panel up and pull forward to remove the front panel from the unit.
3. Remove the retaining screw from the bottom of the swing out control panel. Disconnect the ignition wire from the MCBA control. Open the display panel cover and swing the control panel out.
4. Remove external vent piping at top of unit.
5. Remove and save the (4) mounting screws from the vent outlet adapter from the top jacket panel, see Figure 1.

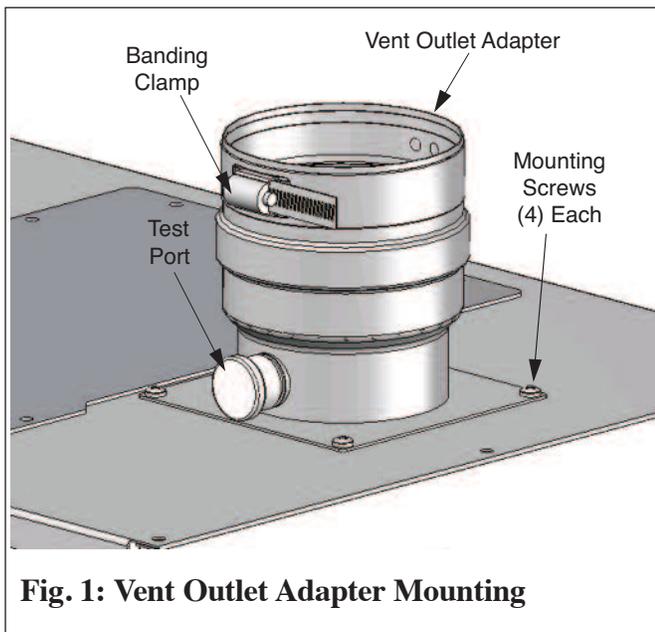


Fig. 1: Vent Outlet Adapter Mounting

6. Lift the vent outlet adapter from the heat exchanger and jacket. Use a twisting motion to disengage the vent outlet pipe from the heat exchanger.

NOTICE

In the case of insufficient height above the boiler cabinet to remove the old vent outlet pipe / adapter the old pipe can be cut in two to facilitate removal.

WARNING

Use care when cutting the old pipe to avoid physical damage to oneself and the unit. Use gloves when cutting. Lift old pipe to disengage it from the heat exchanger flue adapter. Temporarily cover heat exchanger flue adapter with rag to avoid metal shaving entering heat exchanger and condensate trap. Use a hacksaw and with the vent outlet adapter mounting flange raised above the top panel carefully cut the old pipe just below the mounting flange. Use care to avoid sharp edges and remove vent outlet adapter and pipe. Remove rag and ensure no metal shaving have entered the heat exchanger. If metal shavings are present in heat exchanger remove condensate trap and flush heat exchanger condensate pan. Reinstall condensate trap on unit.

7. Remove the flue gasket from the heat exchanger adapter and replace it with a new gasket included in the kit, see Figure 2.

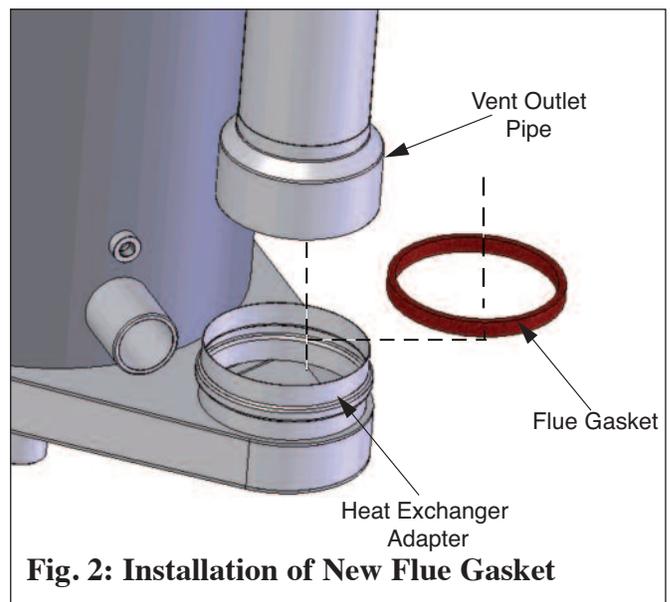


Fig. 2: Installation of New Flue Gasket

Prestige PP Vent Outlet Replacement Kit for Solo 60/110 and Excellence 110 Boilers

PP Vent Outlet Pipe and Adapter Installation

1. Apply some clean water along the heat exchanger flue gasket prior to inserting the new PP vent outlet pipe. Use a downward twisting motion to seat the new PP vent outlet pipe into the heat exchanger adapter (Fig. 2).
2. Apply some clean water to the gasket at the top of the PP vent outlet pipe. Align PP vent outlet pipe vertically and insert new stainless steel vent outlet adapter from the top into PP vent outlet pipe. Make sure the test port is facing toward the front of the unit.
3. Secure vent outlet adapter with existing screws.
5. Close the swing out control panel and secure with the retaining screw. Reconnect the ignition wire to the MCBA control module.
6. Restore power to the unit and operate to verify that all joints are sealed and no flue gas leakage occurs.
7. Replace the front jacket panel and secure with the thumb screws along the upper edge.
8. Place back into service.

NOTICE

Once the vent pipe is seated into the heat exchanger, inspect down / inside the vent pipe to ensure the flue gasket did not dislodge. If the flue gasket is visible inside the vent pipe, disassemble and re-seat the gasket.

4. Connect external vent piping to top of unit vent outlet adapter and secure with banding clamp.